


GEOMETRY & SOILS INPUT GUIDE FOR GRAVITY WALLS

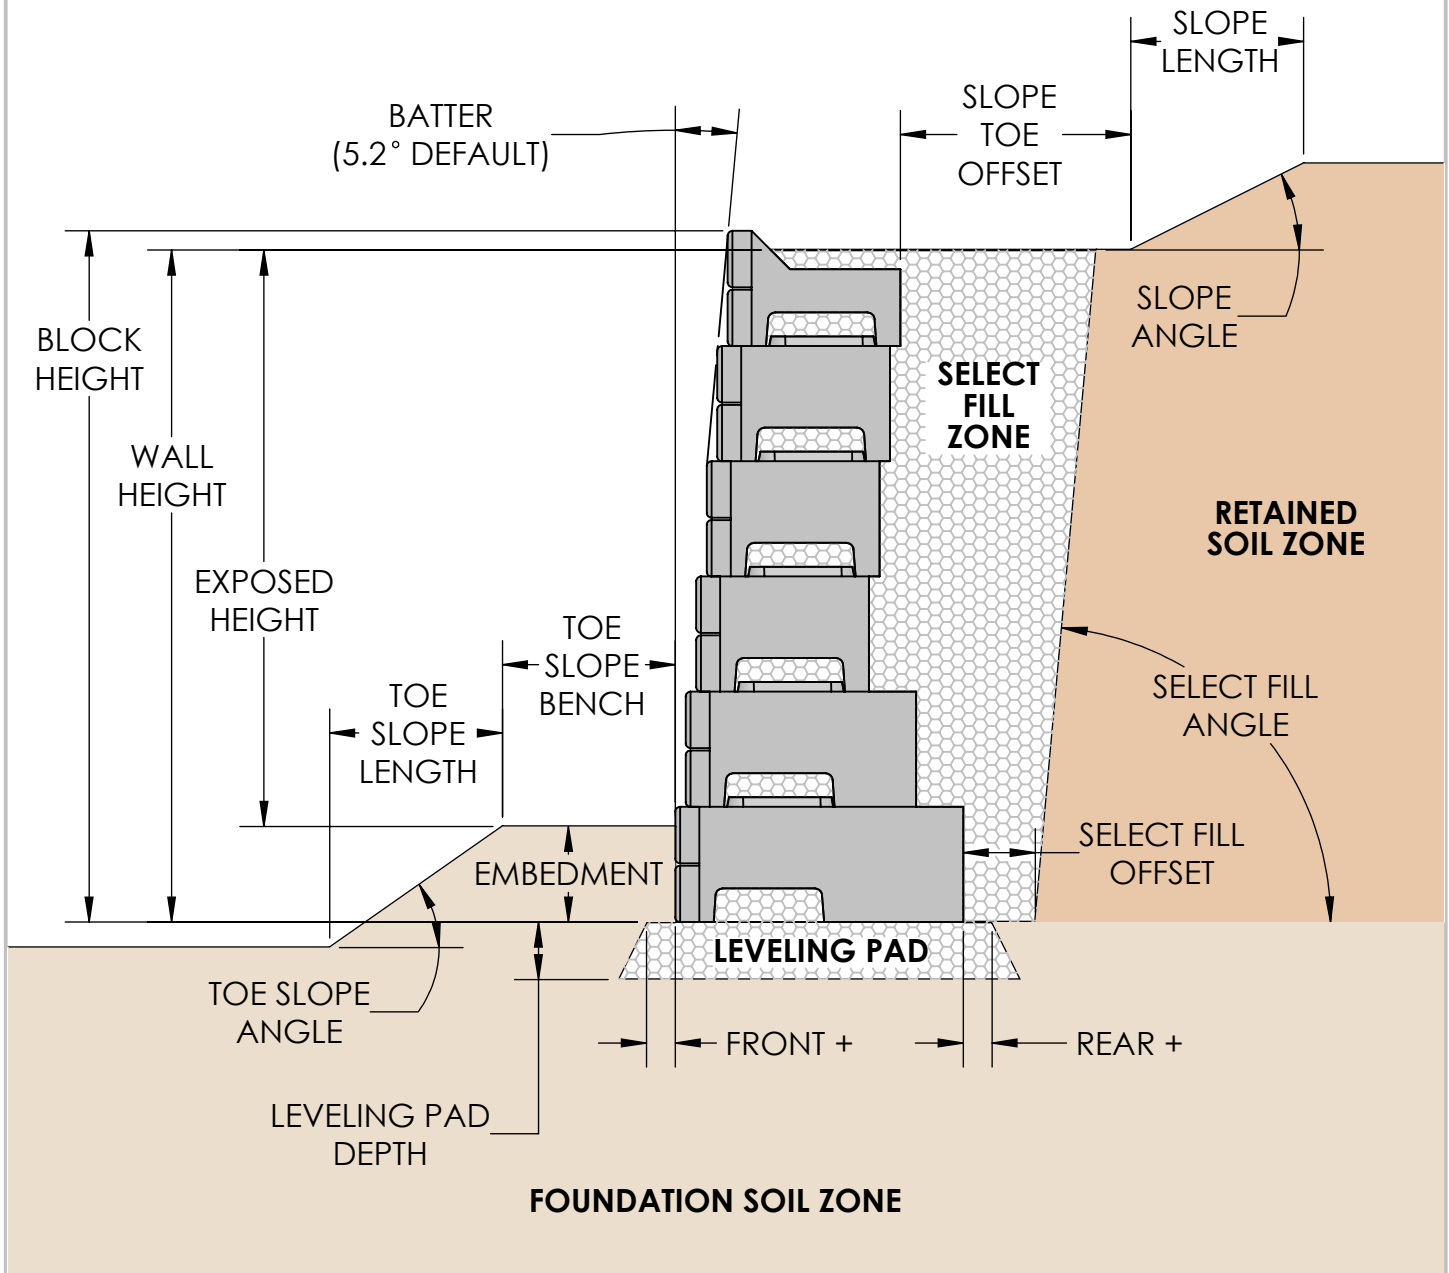

NOTES:

- LIVE LOADS AND DEAD LOADS FOLLOW SAME INPUT PROCEDURE AS SLOPES.
- SELECT FILL MUST BE ENABLED ON "SOIL PROPERTIES" PAGE; OTHERWISE ONLY RETAINED SOIL IS CONSIDERED.
- CAP OFFSET ALLOWS TOP FINISHED GRADE TO BE ABOVE TOP BLOCK, INSTEAD OF ADDING AN ADDITIONAL ROW OF BLOCK.



DRAWN BY	DATE
RYAN STUCKI	5/24/2021
16120 S. PONY EXPRESS RD BLUFFDALE, UTAH 84065 PHONE: (801) 571-2028	

<p style="margin: 0;">TITLE:</p> <h2 style="margin: 0;">GRAVITY WALL INPUT GUIDE</h2>	<p>SCALE: NA</p>	<p>REVISION: 01</p>	<p>SHEET 1 OF 1</p>
---	------------------	---------------------	---------------------